





Getting started with Kibo XS Kit

SETTING UP KIBO XS HARDWARE UNIT



Step 1: Place the soft mat on a flat surface and place the Kibo XS device on the designated square cut out area.

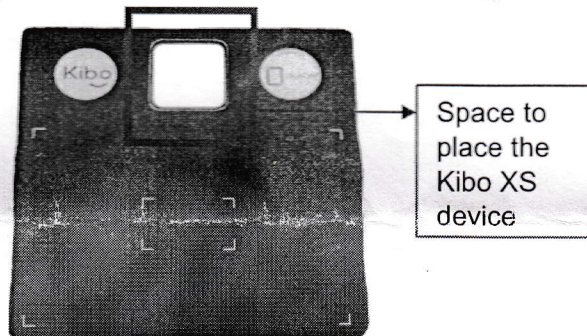


Step 2: Press the camera open button on the side of the device. The camera arm of the device will gently lift up and take the shape of a table lamp.

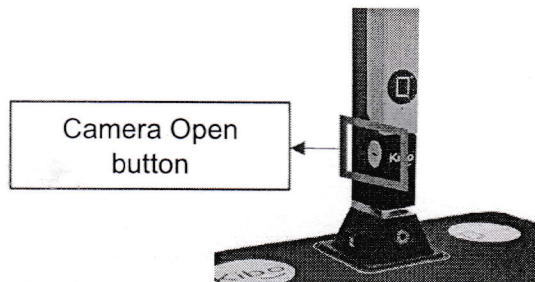

Step 3: Connect one end of the cable provided to the side of the device (USB A) and the other end (USB B) to your Laptop or Computer.

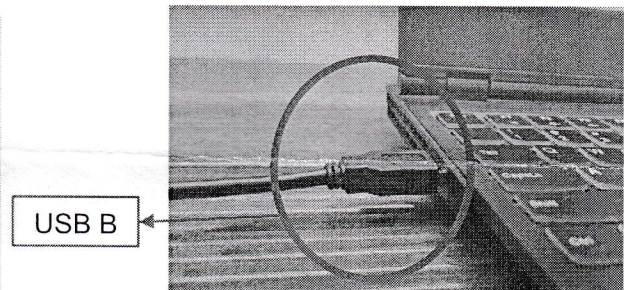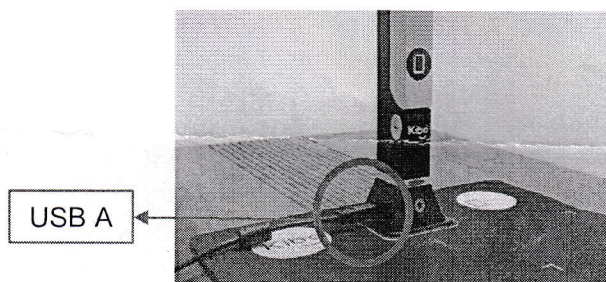

Step 4: Touch the LED fill light button provided at the bottom of the Kibo XS device to turn on light with three levels of light intensity – Low/Medium/High

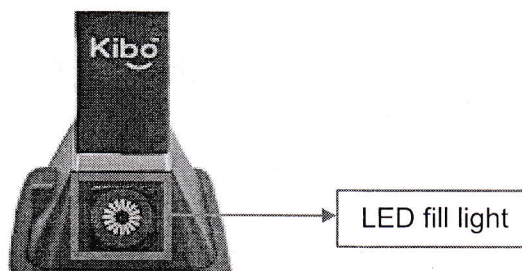

6. Translate



Navigate to the Translate button and choose between current page translate or entire document translate.

Choose your preferred language from the combo box consisting of 100+ languages to translate your document and then click on the Translate button. Your translated text output will be there on screen.

7. Download the text in editable formats



Navigate to the Download file button and select from the dropdown options available to download the current page or entire document in editable formats.

Doc- Downloads file in Microsoft Word format (preferable for regional languages)

Docx- Downloads file in Microsoft Word format

Txt- Downloads file in Notepad format

8. Save



Navigate to Save file button to Save your documents on Kibo Cloud.

The default file name entered would be your timestamp which you can edit and then click on the Save button.

To access your saved files (does not require Kibo XS Hardware device to be connected), please log in to <https://kibo.trestlelabs.com> and navigate to Web Files button.

9. Copy to Clipboard



Navigate to Copy to clipboard button and select it to simply copy the text on the displayed page. You can then paste the copied text to your desired location (Word, Notepad, Email etc.)



Click on the Home button or press Alt + H to go back to the Home screen and continue to access a new document.



To scan and download your document in PDF or Image format, please click on the Capture Image button. Flip the pages and click on the Capture button to scan multiple pages.



To download in PDF format, select the 'PDF Image' button (third icon).



To download in image format, select the Download image button (Fourth icon).



Open the side panel to view your 'Plan Details', 'Validity', 'Shortcut Keys', 'Returns and Refunds Policy', 'Terms & Conditions', 'About the company', 'Contact information', 'Privacy Policy' and 'Settings'.

STEPS TO ACCESS KIBO WEB

Step 1: Open any browser (e.g. Google Chrome) and visit <https://kibo.trestlelabs.com>

Step 2: Place your printed/handwritten hardcopy document on the soft mat of the Kibo XS device.

Please note: Placement of the document is orientation friendly and the document can be placed in any orientation within the soft mat area.



Click on the Capture image button to capture your page in preview. Flip the pages and click on the Capture button to scan multiple pages.



After capturing all the required number of pages, click on the 'Process image button' (Tick Mark) to process all the captured documents.

YOU NOW HAVE THE OUTPUT READY ON SCREEN

1. Listen the text in audio

Press **Alt + P** to listen to the text in audio; Press **Alt + Q** to stop (Quit) listening in audio using Read Aloud Plugin.

Please refer the following video to install Read Aloud extension on your Chrome Browser and also setup shortcut keys for the same: <https://youtu.be/XYOTRmEv-1I>

(You may also use your Screen-reader voices or any other voice and listen to the text on screen).

2. Color Inversion



Navigate to color inverter button and select it. Text becomes white and background becomes black to provide better reading contrast for low vision users.

3. Increase / Decrease Font size



Navigate to Font size button and select size from the drop down ranging from Size 1 to Size 9 to increase or decrease the font size.
This also helps low vision users magnify text and read from the screen.

4. Edit text online



Navigate to the Edit text button and select it to edit the scanned text online. Make the necessary changes to the text and then click on the Save button.
Please note: While editing the text, you can add upto 50 additional words.

5. Audio'tize



Navigate to the Download in audio button and choose between Audio'tize current page, Audio'tize entire document or Audio'tize all pages and download as a Zip file.

Your file will be downloaded locally in MP3 format.